



Catalog #692220
Russell DOT Brake Hose Kit
for 1997-2006 GM W-Body
INSTALLATION INSTRUCTIONS

Please study these instructions carefully before installing your new Brake Hose Kit. If you have any questions, please call our **Technical Hotline at: 1-800-416-8628**, 7:00 am to 5:00 pm, Monday - Friday, Pacific Standard Time or e-mail us at **Edelbrock@Edelbrock.com**. Please fill out and mail your warranty card.


IMPORTANT NOTE:

Proper installation is the responsibility of the installer. Improper installation will void warranty and may result in poor performance and engine or vehicle damage.

INSTALLATION PROCEDURE

IMPORTANT NOTE: Do not allow the master cylinder to completely drain of brake fluid at any time during this process. Doing so may require removing the master cylinder from the vehicle for bench bleeding. Also, use care when handling brake fluid, as it can quickly damage finished surfaces (paint, plating, etc.).

1. Remove factory front brake hoses and replace with Russell hoses using factory routing and mounting.
2. Remove rear hoses and replace with Russell hoses. **NOTE:** Bend on banjo (caliper) hose end should point inboard. Clock banjo on caliper approximately 45° to rear (**See Fig. 1**). Adjustments may be necessary for wheel and tire clearance.
3. Check hose clearance throughout entire suspension and steering travel range.
4. Bleed the system and check for leaks while applying pressure.

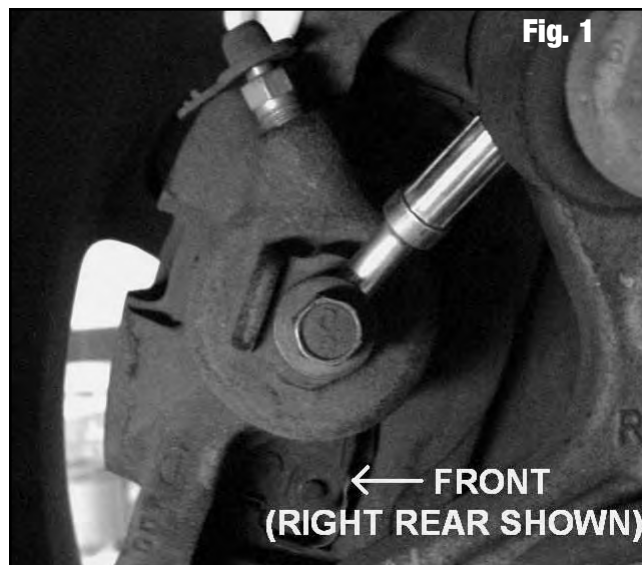

Edelbrock Corporation, 2700 California St., Torrance, CA 90503

Tech Line: 800-416-8628

Office: 310-781-2222

E-Mail: Edelbrock@Edelbrock.com